






















## Battery Charger

### SPECIFICATION

Model Name	B259-201
Input Voltage	AC100-240V 50/60Hz
Output Voltage	DC18-42V 5.6A(168W Max.)
Charging mode	Constant Power

### CHARGING LED INDICATION

State	Red LED	Green LED	Orange LED
Battery unconnected			
Initial pre-charge			
Battery Capacity < 20%			
Battery Capacity 20~39%	 		
Battery Capacity 40~59%	  		
Battery Capacity 60~79%	   		
Battery Capacity $\geq$ 80%	    		
Charge completed			
Battery failure / Charger failure			

 LED is flashing

### CHARGER OPERATING TEMPERATURE/HUMIDITY RANG

Operating	-10 to 40 °C
	5 to 95 %RH
Non- Operating	-20 to 65 °C
	5 to 95 %RH

### TROUBLESHOOTING

When getting through AC power, please check the power LED lighted "Green" first(not plug-in Battery yet), If power LED not lighted "Green":	Please confirm the AC power cord is well connected or not. After check AC power cord is well, and LED still not lighted "Green", please send back to repair.
When getting through AC power, and the power LED lighted "Green", then plug-in Battery, if power LED is Blinking Orange or Green, please check:	If the output plug is well connected or is it with reverse polarity? Please confirm the connection of the connector
	If the battery is out of use? Please replace of the new battery.
	If the charger broken? Please send back to repair. Please remove AC power and plug-in again if LED lighted Orange blinking. However, if the LED Orange blinking symptom was still occurred after doing charger reset, please return to the supplier. Please avoid to plug in & out quickly in turns.

## ATTENTION

The charger is designed for Li-ion battery only

Please operate charger in an open area to keep good ventilation

This charger is only for indoor used

If there is any problem, please return to local dealer or services center. Do not try to open and repair the charger by yourself

## MAINTENANCE AND STORAGE

Disconnect equipment from power supply before cleaning.

Do not expose your battery pack or cordless tools to water or rain, or allow them to get wet. This could damage the tool and battery pack. Do not use oil or solvents to clean or lubricate your battery charger.

Place out of reach of children.

Store in a dry place not subject to subzero temperatures which could cause the cord insulation to become stiff and possibly crack when uncoiled.



Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary. This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmentally friendly and healthy way.

## IMPORTANT SAFETY INSTRUCTIONS

1. SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for battery charger Models B259-201.
2. Before using battery charger, read all instructions and cautionary markings on battery charger, battery, and product using battery.
3. CAUTION – To reduce risk of injury, charge only Li-ion type rechargeable batteries. Other types of batteries may burst causing personal injury and damage.
4. Please read these operating instructions carefully before operating the battery charger.
5. Keep this instruction for later reference.
6. Do not open the equipment to reduce the risk of electrical shock. For safety reasons it is only allow to be opened by qualified service personnel.
7. Protect equipment from humidity.
8. If the equipment is not used for long time, disconnect the equipment from power supply to avoid being damaged by transient over voltage.
9. Children should be supervised to ensure that they do not play with the appliance.
10. Cleaning and user maintenance shall not be made by children without supervision.
11. Can't use for charging non-rechargeable batteries.
12. Disconnect AC power before DC output unplug.
13. The power unit is capable of operating at different voltage without user adjustment.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## USE ONLY WITH BATTERY PACK

MODEL	E2C0D(35.9V/11.1Ah Li-ion Battery)
	E3C09(36.9V/14.4Ah Li-ion Battery)
	E3C0A(35.9V/16.7Ah Li-ion Battery)
	E3C0B(35.9V/16.7Ah Li-ion Battery)
	E4C0M(36.9V/19.2Ah Li-ion Battery)
	E4C0L(35.9V/22.3Ah Li-ion Battery)
	E2C0C(35.9V/11.1Ah Li-ion Battery)

# DARFON

Darfon Electronics Corp.

No.167-1, Shanying Rd., Guishan Dist, Taoyuan City 33341, Taiwan, R.O.C.

Darfon Electronics Czech s.r.o

Cvrčovice 192, 691 23 Cvrčovice. Czech Republic.

